Multiple Zone RGB/RGBW RF Remote Controller

Model No.: RS9/RS3/RS4/RS8

18-Key/1,2,4,8 Zone/Touch color wheel/Wireless remote 30m distance/AAAx2 battery/Magnet stuck fix



Features

C€ RoHS @mc LVD RED

- . Apply to RGB or RGBW LED controller.
- Ultra sensitive color adjustment touch wheel.
- Independent dimming function of each R, G, B, W channel to achieve millions of colors.
- Each remote can match one or more receiver.
- AAAx2 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be stuck on back holder.


Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(AAAx2)
Working current	<5mA
Standby current	< 10µA
Standby time	1 year
Remote distance	30m(Barrier-free space)

Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED
Warranty	
Warranty	5 years
Warranty	5 years
Weight	5 years
,	5 years 78g
Weight	,

Mechanical Structures and Installations

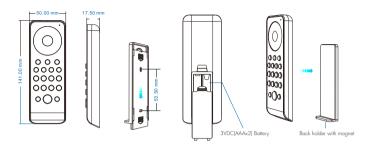

To fix the remote, three options are offered for selection:

- Option 1: stuck the remote on any metal surfaces directly.
- Option 2: fix the remote' back holder on the wall with two screws.
- Option 3: adhere the remote' back holder to the wall with paster.

Operation

- \bullet When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds,
 the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

User Manual Ver 1.0.6

Key function

RS9 1 zone RGB/RGBW remote



• RS3 2 zone RGB/RGBW remote



RS4 4 zone RGB/RGBW remote



RS8 8 zone RGB/RGBW remote



Short press play 10 built-in mode, long press 2s run mode-cycle.

For dynamic mode, adjust speed, short press 10 levels, long press 2s get the default speed.

For static color, adjust saturation, short press 11 levels, long press 1-6s for continuous adjustment.

Adjust brightness, short press 10 levels, long press 1-6s for continuous adjustment.

Short press get red, green or blue color directly, long press 1-6s adjust R/G/B brightness continuously to achieve millions of colors.

Short press turn on/off white color, long press 1-6s adjust white brightness continuously.

Turn on/off 1/2/3/4/5/6/7/8 zone light.

Short press select and turn on zone light, long press 2s turn off zone light, short press multiple zone key fastly, will select multiple zone synchronously.

Turn on/off all 8 zone light.

2 scene memory short press recall the scene, long press 2s save current color into \$1/\$2. the LED indicator display green when save OK. 8 zone recall or save synchronously.

Page 2 User Manual Ver 1.0.6